


CLEANING PROCEDURE | DYCEM® ACCESS TILES



Method 1: Pre-saturated wipes

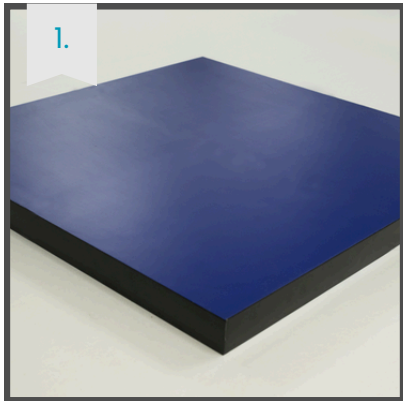

Clean tiles at least once a day (or as advised by your specialist) to maximise performance.



Clean using a pre-saturated wipe (isopropyl alcohol wipe – 70/30 IPA recommended).



Apply pressure and wipe over the surface until dirt is removed. Allow to dry.

Method 2: Spray & flat mop



Clean tiles at least once a day (or as advised by your specialist) to maximise performance.



Spray the surface, or the flat mop with a Dycem-approved cleaning solution (diluted per manufacturer's instructions).



Using a flat mop clean the surface, working away from the controlled area. Use a dry flat mop, wipe, or squeegee to pick up the excess liquid if necessary.

Tips & Advice

- For maximum performance, clean your Dycem mats at least once a day (or as advised by your specialist) with the following:
 - **InSpec N10** or approved cleaner
 - Spray bottle or pre-saturated wipes
 - Flat mop
- After cleaning the Dycem, wash out any equipment so that it is ready to reuse.
- Where decontamination or sterilisation takes place using a phenolic or hydroxide, rinse as per the instructions. Otherwise a film will develop reducing the effectiveness of Dycem.
- For heavily decontaminated areas, contact Dycem's customer service team who will be happy to discuss the best solution with you.
- **DO NOT USE** concentrated bleaching agents, scouring or abrasive powders, or cleaning machines with stiff brushes. Buffing or polishing machines will damage the surface, shortening the active working life of the Dycem.
- If you would like to **clean mechanically**, please check with your Dycem representative to see if it is compatible.
- If you have any questions or concerns, or would like to schedule a Dycem deep clean, please get in touch.

